

BaByliss[®] PRO

STYLIST TOOLS

TITANIUM EXPRESSION



DEEP
WAVER



TITANIUM
CERATHERM[™]
SYSTEM



BAB2469U

CONGRATULATIONS ON YOUR TITANIUM EXPRESSION PURCHASE

With over 50 year's heritage, BaByliss PRO remains the choice of the world's best professional stylists. When it comes to perfectly styled hair our mission is to create styling tools that delivery the very highest results.

We hope you enjoy using your new product from our Titanium Expression range; a luxurious collection of professional hair tools that combine high-fashion styling with innovative technology to help you achieve fast, long-lasting results with a flawless finish for salon performance every time.



TITANIUM
CERATHERM™
SYSTEM

Superior titanium-ceramic with ultra-advanced ceramic heaters delivering constant, regulated temperature control for fast, long-lasting results with a flawless finish.

IMPORTANT SAFETY CAUTIONS

- Please retain these instructions for future reference.
- This appliance should only be used as described within this instruction booklet.
- **WARNING!** Polythene bags over product or packaging may be dangerous. To avoid danger of suffocation, keep wrapper away from babies and children. These bags are not toys.
- **WARNING!** Do not use this appliance near water contained in basins, bathtubs or other vessels.
- Do not use the appliance in the bathroom.
- Do not immerse the appliance in water or other liquids.
- This appliance should only be used as described within this instruction booklet.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, contact the Conair Customer Care Line (refer to “UK After Sales Service” section for further information).
- Do not use the appliance if the cord is damaged. In the event of damage, discontinue use immediately. If the cord is damaged it must be replaced by



the manufacturer. Return the appliance to the Conair Service Centre (refer to “UK After Sales Service” section for further information).

- Do not leave the appliance unattended when switched on or plugged in.
- Do not place the appliance on any heat sensitive surface whilst in operation.
- Take care to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the ears, eyes, face and neck.
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might

cause a hazard, unless they have been correctly instructed and are adequately supervised.

- Children should always be supervised to ensure that they do not play with this product.
- Allow appliance to cool before storing away.
- After use, do not coil the cord around the appliance as this may cause damage. Instead, coil loosely by the side of the appliance.
- This appliance complies with the requirements of Directives 04/108/EEC (Electromagnetic Compatibility) and 06/95/EEC (Electrical Safety of Domestic Appliances).


GETTING TO KNOW YOUR DEEP WAVER

Create deep, defined waves with incredible volume and shine. Featuring a top temperature of up to 210°C and ultra-advanced ceramic heaters, this Deep waver delivers regulated temperature control, effortless styling and instant long-lasting results. The extra large waving plates with a superior titanium-ceramic finish will leave hair extremely glossy and full of movement and volume.

FEATURES

- Extra large titanium-ceramic plates for deep, frizz-free waves
- Ultra-advanced ceramic heaters give 15 second heat up with constant, regulated temperature control
- 5 digital temperature settings up to 210°C
- Stay cool safety tip
- Salon length 2.7m swivel cord for ease of use
- Heat mat with storage compartment for convenience and safety

OPERATING FEATURES

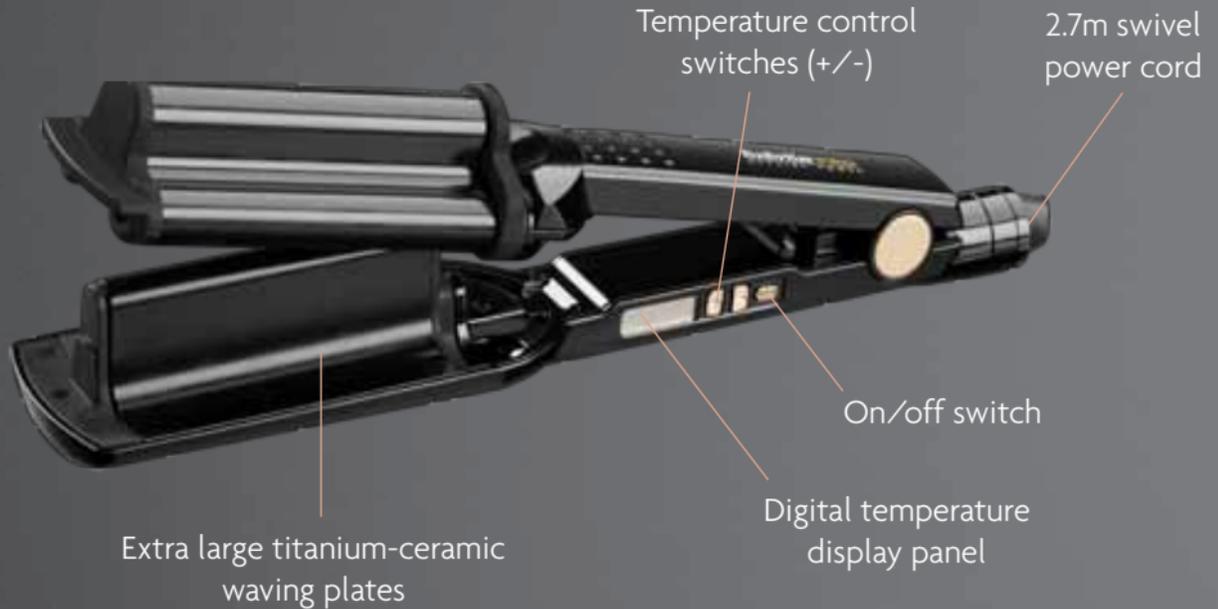

FINDING THE CORRECT HEAT SETTING FOR YOUR HAIR TYPE

There are 5 temperature settings to select from (170°C-210°C). Use the guide below to find the correct temperature for your hair category. We recommend you always start with a lower temperature and increase gradually if required.

Hair Type Description	Very Fine, Fragile Hair	Regularly Coloured or Highlighted Hair	Fine, Easy to Curl Hair	Normal Textured Hair	Naturally Curly or Wavy Hair	Thick or Coarse Hair
Recommended Temperature Setting	170° C	170° C	180° C	190° C	200° C	210° C

IMPORTANT! This appliance is designed to reach very high temperatures. If the maximum setting is too hot for the hair type then select a lower temperature setting.

HOW TO USE YOUR DEEP WAVER

WARNING! This appliance reaches up to 210°C, please take care to avoid the hot plates coming in to direct contact with the skin, in particular the ears, eyes, face and neck.

CAUTION! Do not place the appliance directly onto any heat sensitive surface whilst in operation. Use the heat mat provided to protect the work surface whilst styling your hair.

- Ensure hair is dry and combed through.
- Press the 'I/O' button to switch the styler on.
- Use the temperature '+/-' buttons to select the preferred temperature. The temperature increases in 10°C increments for specific temperature control (170°C-210°C).
NOTE: Always start with a lower temperature and increased gradually if required.
- The appliance will almost instantly heat up to the chosen heat setting

STYLING ADVICE

- Divide dry hair into 4cm sections and comb through.
- Take a section of hair, starting around 3-4 inches from the scalp.
- Place the hair section between the top and bottom plates of the styler. The top plate of the styler should face away from your head (the flat base plate will protect your face).
- Clamp the handles together until they close and hold in place for 5-8 seconds. Take care to avoid the hot surfaces of the styler coming into contact with the skin, in particular the eyes, ears, face and neck.
- Release the handles, gently move the styler down the section and re-position to overlap the last wave created, to ensure a continuous wave effect in the hair.
- Continue down the entire hair section, towards the ends of the hair.
- Repeat as necessary.
- After use, press the 'I/O' button to turn the styler off and unplug.
- Allow the styler to cool completely before storing away. For extra protection, wrap the styler in the heat protection mat.

HELPFUL HINTS

- Once all the hair has been styled, take random sections from the top layer and position the styler slightly higher up from the first wave created to create a natural looking style.
- For a voluminous look, clamp the hair close to the root on the bottom sections only. As you move to the top section, position the styler lower down the section.
- After styling, break up the waves with your fingers and add serum to the hair to create a softer look and tame any flyaways.
- Never use a brush as this will add static to the hair, causing the hair to become frizzy.

LOOKING AFTER YOUR DEEP WAVER

- In order for your styler to retain its top performance it is important to ensure there is no product build up on the plates. When the styler is completely cool and unplugged, use a damp cloth over the surface of the plates to wipe away any styling product.
- Keep the power cord away from the hot waving plates at all times.
- Before storing away, always allow the waving plates to cool down and place in the heat mat provided for extra protection.
- To prevent cord damage, do not wrap the cord around the styler – always store the cord next to it.

UK GUARANTEE

This BaByliss PRO appliance is guaranteed for salon use for 6 months.

This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE

For further advice on using the appliance, contact the Conair Customer Care Line on 0870 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

If you should need to return your appliance to us please send it to the following address:

Customer Care Centre,
Conair Logistics
Unit 4
Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your name and address, together with a copy of proof of purchase and details of the fault.

SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

UK WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.
- Neither core should be connected to the earth terminal of a three pin plug marked with the letter E or  .

This appliance comes fitted with a British Standard 13 amp type plug and a 5 amp fuse. It is important to always use a 5 amp fuse, should its replacement be required. If any other type of plug is used, a 5 amp fuse must be fitted at the distribution board.

BaByliss[®] **PRO**
STYLIST TOOLS