

# *BaByliss*<sup>®</sup> PRO

STYLIST TOOLS



## HEATED CERAMIC ROLLER SET

BAB3045U

# *BaByliss*<sup>®</sup> PRO

---

S T Y L I S T T O O L S

## **HEATED CERAMIC ROLLER SET**

The BaByliss PRO Heated Ceramic Roller Set includes 20 easy-grip rollers in 3 different sizes to create fast, flawless curls, shape and volume for all hair types and lengths. Variable high heat performance delivers long-lasting results and ceramic technology provides a frizz-free, smooth and shiny finish.

## **FEATURES**

- 20 heated ceramic rollers for a smooth and shiny finish
- 8 jumbo, 6 large and 6 medium rollers
- High heat performance with 5 minute ultra-fast heat up
- 2 temperature settings: 90°C - 130°C for different hair types
- Easy grip roller design with cool rims
- Heat ready indicator
- 10 super clips and 20 metal pins to secure rollers in place
- Storage area for metal clips
- On indicator light
- Salon length 2.7m power cord

## **SAFETY CAUTIONS**


- This appliance should only be used as described within this instruction booklet. Please retain for reference.

**WARNING!** Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is

not a toy.

- **UK Only:** This appliance must not be used in the bathroom. If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

**WARNING!** Do not use this appliance near bath tubs, showers, basins or other vessels containing water.

- Do not use the appliance in the bathroom. 
- Do not immerse the appliance into water or other liquids.
- The centre of the roller will be hot. Hold the rollers by the ends to roll the hair. Do not touch the heating posts that hold the rollers.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the ears, eyes, face and neck.
- Never drop or insert any object into any opening.
- Always unplug the appliance when not in use or before cleaning.
- Do not leave the appliance unattended when switched on or plugged in.
- Do not place on any heat sensitive surface and always allow the appliance to cool down before storing away.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the

appliance has been dropped. In the event of damage, contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).

- Do not use the appliance if the lead is damaged. In the event of lead damage, contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Careful adult supervision is required when this appliance is used on or near children. Do not use on very young children.
- This appliance should not be used, cleaned or maintained by children. Keep out of reach of children.
- Always ensure that this appliance is kept out of the reach of children at all times, particularly during use and whilst cooling.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).

## INSTRUCTIONS FOR USE

### General

- The rollers can be used on damp or dry hair.
- Place the appliance on a level, heatproof surface.  
**WARNING!** Do not open the lid until the rollers are fully heated. The jumbo roller in the centre of the unit has a red heat ready dot on the top. The dot will turn white to indicate the rollers are ready for use.
- Turn the appliance on by sliding the switch to either the 'I' or 'II' position, depending on the heat setting required. There are two heat settings, a low heat setting (I) and a high heat setting (II). Use the lower setting for delicate, fine or coloured hair. For thicker hair, use the higher heat setting.
- Allow the rollers to heat up for approximately 5 minutes. The heat ready dot on the jumbo roller in the centre will turn from red to white, indicating the rollers are ready to use.
- Comb the hair thoroughly, open the roller set lid and choose one of the 3 sizes of rollers, depending on the curl or style desired.  
**WARNING!** Do not touch the hot metal parts of the appliance during use.
- Start with the top section of the hair first and work down towards the nape of the neck.  
**WARNING!** Take care to avoid contact between the hot rollers and the face, neck, eyes or ears.
- Take a section of hair the width of a roller and wind the end of the hair around the roller, holding the hair taut. For intense root lift wind the hair to the root, for general movement or body, wind to the mid lengths only.
- Secure the roller with one of the clips or metal pins provided.
- Once you have finished styling, turn off the unit by sliding the switch back to the '0' position.
- Leave the rollers in the hair for up to 10-15 minutes depending on the style required.
- For long-lasting, defined curls, the rollers should be left in the hair for a longer period of time or until the rollers have completely cooled. For

softer, glamorous waves or added volume the rollers should be left in the hair for a shorter period of time before removing.

- To remove the rollers from the hair, gently hold the roller in one hand and remove the clip or metal pin with the other. Slowly unroll the roller, being careful not to pull the hair as you unwind. Once the hair is loose from the roller, let it bounce back up.
- Let the hair cool so the curl can 'set', then style the hair as desired.
- Once the unit has cooled down, replace all the clips and rollers back in the unit and close the lid.
- Allow the appliance to cool down completely before storing away.

### **IMPORTANT!**

- The BaByliss PRO Ceramic Heated Rollers have been specifically designed to reach very high temperatures in order to produce fast and flawless curl formation.
- When applying the rollers to long or thick hair, the rollers can be used instantly once the heat ready dot has turned white.
- When applying the rollers to short or fine hair, when the heat ready dot has turned white, turn off the unit, open the lid and allow the rollers to cool until they feel comfortable when applying into the hair. Failure to do so may lead to discomfort.
- Always take extra care to avoid the rollers coming into direct contact with the scalp.

### **CLEANING AND MAINTENANCE**

- To clean the rollers, use a damp cloth with some mild detergent and wipe over the rollers to remove any residue.
- Towel dry and leave rollers for 1 to 2 hours before using again to ensure they are completely dry before use.
- Always unplug the appliance when not in use or before cleaning.
- Always store the appliance with the lid closed to protect it from dust.
- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.

## **UK GUARANTEE**

This BaByliss PRO appliance is guaranteed for salon use for 6 months. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

## **UK AFTER SALES SERVICE**

For further advice on using the appliance, contact the Conair Customer Care Line on 0870 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com).


If you should need to return your appliance to us please send it to the following address:

Customer Care Centre  
Conair Logistics  
Unit 4  
Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your name and address, together with a copy of proof of purchase and details of fault.

## SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

## UK WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

GREEN & YELLOW = EARTH

BLUE = NEUTRAL

BROWN = LIVE

- The wire which is coloured GREEN & YELLOW must be connected to the terminal in the plug which is marked with the letter E.
- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.

This appliance comes fitted with a British Standard 13 amp type plug and a 3 amp fuse. It is important to always use a 3 amp fuse, should its replacement be required. If any other type of plug is used, a 5 amp fuse must be fitted at the distribution board.