

***BaByliss***® **PRO**  
PRECISION STYLIST TOOLS



**PROFESSIONAL CORDLESS  
SUPER MOTOR CLIPPER**

**Model BAB8700U**



## PROFESSIONAL CORDLESS SUPER MOTOR CLIPPER

A heavy-duty, lithium powered cordless clipper with precision engineered Japanese steel blades and a high-torque brushless motor to deliver outstanding cutting performance and precise control.

### FEATURES

- High power cord or cordless performance
- Precision engineered Japanese steel blades with a super sharp V cutting angle
- Advanced lithium for sustained power performance
- 3 hour charge time for 120 minutes run time
- High-torque brushless motor for long-lasting power and speed
- 5 position adjustable taper lever
- 6 comb guides for cutting grades 1-6
- Charging and storage unit
- Includes oil and cleaning brush

### SAFETY CAUTIONS

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

### IMPORTANT CHILD SAFETY

- **WARNING!** Polythene bags over product or packaging may be dangerous. To avoid danger of suffocation, keep wrapper away from babies and children. This bag is not a toy.

### WARNING! THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of the reach of children (during and after use and whilst cooling).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

## **IMPORTANT SAFETY**

**WARNING!** Do not use the appliance near water contained in basins, bathtubs or other vessels.



- Do not use the appliance in the bathroom.
- Do not immerse the appliance in water or other liquids
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, contact the Conair Customer Care Line (refer to UK After Sales Service section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on.
- Do not place the appliance on any surface whilst in operation.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Special care is required when using the appliance close to the ears, eyes and face.
- Always switch off and unplug the appliance when cleaning or when not in use.
- Allow the appliance to cool before storing away.
- After use, do not coil the cord around the appliance as this may cause damage to the cord. Instead, coil the cord loosely by the side of the appliance.
- This appliance contains a lithium ion battery and must be disposed of safely at the end of its life. Please take to a recycling centre for safe disposal.

- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact our Customer Care Centre. (Refer to 'UK After Sales Service' section for further information).

## **PREPARATION FOR USE**

### **General**

- Always inspect the appliance before use to ensure the clipper blades are free from hair, debris etc.
- Use on clean, dry hair that has been combed until tangle-free.

### **Oiling Instructions**

- For optimum cutting performance, it is highly recommended to oil the blades after every use.
- When using the oil for the first time, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors.
- Remove the blade guard and switch the appliance on.
- Holding the clipper at a 45 degree angle, gently squeeze the oil tube and apply 2 drops directly onto the blades.
- Leave the unit on for a further few seconds to allow the oil to thoroughly spread along the length of the blades.
- Switch off the unit and remove any excess oil by gently dabbing with a cloth before using on hair.

## Comb Guides:

This appliance is supplied with 6 comb guides:

Cutting Length	Grade
3mm ( $\frac{1}{8}$ " )	#1
6mm ( $\frac{1}{4}$ " )	#2
10mm ( $\frac{3}{8}$ " )	#3
13mm ( $\frac{1}{2}$ " )	#4
16mm ( $\frac{5}{8}$ " )	#5
19mm ( $\frac{3}{4}$ " )	#6

- To attach a comb guide, ensure the appliance is switched off. Position the comb guide over the front of the clipper blade and slide over the head. Push and click the rear of the comb guide into position.
- To remove the comb guide, ensure the appliance is switched off. Push the tab on the rear of the comb guide away from the head and lift off.

## Taper Control

The taper control lever enables fine cut adjustment for precision clipping.

- To increase the cutting length, push the lever down.
- To reduce the cutting length, push the lever up.

## INSTRUCTIONS FOR USE

### Charging the Appliance

- Before using the appliance for the first time, charge the battery continuously for 3 hours. Maximum battery capacity will only be reached after 3 completed charging and discharging cycles.
- Plug the charging adapter into a suitable mains power socket and switch on. The red LED indicator light will flash when correctly connected to the mains power and will continuously flash until the battery has fully charged. When the battery is fully charged the LED indicator light will stop flashing but remain on.

**NOTE:** Always place the clipper in the base with the 'I/O' switch in the OFF position.

- When the clipper is running low on charge, the LED indicator light will flash, warning there is approximately 3 minutes of battery use

remaining. A 3 hour charge will provide approximately 120 minutes use. A 30 minute quick charge will provide approximately 30 minutes use.

- If the charging light starts to flash rapidly (more than 4 flashes per second) then the appliance is faulty. If this happens then please stop charging and remove the adapter from the mains and contact the Conair Customer Care Line. (See 'UK After Sales Service' section for further information).

### **Preserving the Batteries**

- In order to maintain the optimum capacity of the rechargeable batteries, the appliance should be recharged for 3 hours approximately every 3 months.
- Using the clipper on the mains - ensure that the clipper is switched off. Plug into a suitable mains socket. Wait for approximately a minute, and then switch on.  
**IMPORTANT:** Do not use the clipper in this mode for more than 20 minutes.

### **Clipping**

#### **For an all over even cut:**

- Attach a comb guide as required – your clipper is supplied with 6 comb guides (grades 1-6). Each comb guide is labelled.
- Switch the clipper to the 'I-ON' position and the blades will start to move.
- Starting at the nape of the neck, hold the clipper with the teeth of the comb guide pointing upwards, ensuring that the comb guide is resting flat against the head.
- Slowly move the clipper upwards and outwards through the hair towards your crown, against the direction of the hair growth. The comb guide will help to lift the hair and the blades will cut the hair at the desired length.
- Once the desired length is achieved at the back of the hair, start clipping the top and sides.
- Hold the clipper to the front of your hair with the teeth pointing towards the back of your head, and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.
- You should achieve an even length cut all over your head.

### **For a shorter back and sides, with length on the top:**

- Attach the longer comb guide as required for the top of your hair – your clipper is supplied with 6 comb guides (grades 1-6). Each comb guide is labelled.
- Switch the clipper to the 'I-ON' position and the blades will start to move.
- Hold the clipper to the front of your hair with the teeth pointing towards the back of your head and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.
- If you then wish to take the back and sides of your hair to a shorter length, switch off the appliance and attach a shorter comb guide.
- Starting at the nape of the neck, with the comb guide flat against the head, move the clipper upwards and outwards over the area you want to take shorter.
- Repeat on the sides of the hair, starting with the teeth of the clipper pointing upwards and comb guide flat against the area above the ear, again moving the clipper upwards and outwards.

### **Outlining:**

- To tidy up the edges around your cut e.g. neckline and sideburns, detach the comb guides.
- Hold the appliance upside down, so the front of the clipper is facing towards your head.
- Hold the clipper straight on your sideburns or neckline and move the clipper downwards. This will give you a clean, smooth finish.

### **Cleaning & Maintenance**

- To maintain optimum performance, the appliance should be cleaned after each use.
- Blow away any remaining hair on the blades or use the cleaning brush provided.
- Remove the comb guide. The comb guide can be rinsed under running water. Ensure they are dried thoroughly before storage or further use.
- Do not disassemble the blades.
- Oil the blades after every use to ensure optimum cutting performance.

## **UK GUARANTEE**

The Conair Group Ltd, Unit 3, Waterfront Business Park, Fleet, GU51 3TW.

This BaByliss PRO appliance is guaranteed for professional use for 2 years and is only valid within the United Kingdom.

### **Exclusions**

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet.
- 2.) The appliance has been purchased from an unauthorised stockist\*.
- 3.) Repairs or alterations have been attempted by unauthorised persons.
- 4.) The failure of the appliance is a direct result of misuse.
- 5.) The failure is a result of not following the instructions for use.

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

\*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc.

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com) for further information on authorised stockists.

**It is important to retain your proof of purchase. We recommend attaching your receipt to this page.**

**Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able**



**to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.**

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

**This guarantee is an additional benefit and does not affect your statutory rights as a consumer.**

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com).

#### **UK AFTER SALES SERVICE**

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com).

Return address:

Customer Care Centre  
Conair Logistics  
Unit 4, Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

**Please note this Instruction Booklet is not the guarantee.**



## **SAFE DISPOSAL**

To minimise hazards to health and the environment at the end of this product's life, laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of this product at a suitable collection facility where it will be sent for appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.



